

Print head cleaning fluid for Inkjet Printers

Use this guide with PCX stock code 61001 30ml cleaning fluid

PCX stock code 6101 30ml cleaning fluid rejuvenates your old dried up print head and keeps it working at optimum performance.

If you have left your cartridge in your printer for a long period of time the print head could become blocked with dried ink. This cleaning fluid can help to remove the build up and restore your cartridge performance.

The liquid is designed primarily to clean dried ink from the print head.

Instructions:

1. Printer cartridges from manufacturers such as Hewlett Packard, Lexmark, Primera, and Olivetti have the print head on the cartridge. This can be identified by an electrical circuit on one end of the cartridge.

Simply pour some liquid onto a lint free cloth and gently wipe away the dried ink from the print head.

Where the printer or cartridge has not been used for some time, simply pour a small amount of liquid into a shallow receptacle and set the cartridge print head in the liquid. Leave the print head to soak for 2-3 hours. The cleaning fluid will eventually begin to break down the dried clogged ink allowing the print head to be wiped clean and used again.

It is important to ensure that the print head is handled extremely carefully

2. Where you have ink cartridges that do not include the print heads (eg most Canon, Epson, Brother etc). Take out the cartridge and place a couple of drops of cleaning fluid where the ink goes into the printer (typically a small hole at the base where the ink cartridge goes). Replace the ink cartridge, leave it for 10 minutes and try printing the printer's print test, or other printing.

If the problem persists you may try gently pouring some cleaning fluid into the ink cartridge, replacing the cartridge into the printer and then doing a cleaning cycle. Stop at this point and leave the printer for an hour or two without using it. After that time print a few sheets of paper that have large amounts of coloured ink you have an issue with... Often after a few pages the ink will start to flow (print) correctly.

Do the following at your own risk - great care needs to be taken not to damage the print head.

Some printers allow you to take out the print head after removing all the ink cartridges (for example most Canon inkjet printers). In this case carefully take out the print heads and follow instructions 1. (above).

Warnings:

Keep cleaning liquid out of reach of children. Avoid contact with eyes and skin. In case of contact wash with plenty of water.

Some printer makers may claim to void printer warranties if the print heads are found to be damaged and / or compatible inks are used.

PCX® Creative
Digital
Supplies

PCX Pty Ltd - ABN 88 002 631 370
21 / 1 Talavera Road North Ryde NSW 2113
www.pcx.com.au info@pcx.com.au
(02) 9878 4444 Fax:(02) 9888 7088